



ORDER BY PART NUMBER, NOT CODE NUMBER

CODE NO.	PART NO.	NO. REQ	DESCRIPTION	CODE NO.	PART NO.	NO. REQ	DESCRIPTION
1	1019C	1	Stopper Assembly (Includes Codes 2 & 3)	30	71022	1	Rotating Shredder Assembly
2	1144	1	Gasket, Stopper (Inner)	31	70734	1	Screw, Tapping
3	1146A	1	Gasket, Stopper (Outer)	32	70451	1	Lock Washer
4	5170AC	1	Flange, Strainer	33	1266	1	Shield, Wire Cover
5	8763	2	Gasket, Sink Flange	34	9209W	1	End Bell Assembly, Upper
6	5150E	1	Flange, Backup	35	1470	1	Gasket, Tailpipe
7	5141	1	Flange, Mounting	36	70076	1	Tailpipe
8	5147	3	Screw, Backup	37	5490	1	Flange, Tailpipe
9	5166	1	Ring, Retaining	38	1491	1	Screw, Tailpipe
10	1155	1	Gasket, Mounting	39	72173	1	Nut
11	5298	1	Flange, Body	40	72171	1	Seal
12	4152	1	Insulation, Switch Cover	41	3590W	1	Stator Assembly
13	2586B	1	Cover, Switch	42	70422	1	Rotor & Shaft Assembly (Includes Code 43)
14	2588	1	Screw, Tapping (Switch Cover)	43	2642	1	Washer
15	1252A	1	Bracket, Wire Cover	44	2467A	1	Switch, Centrifugal Actuator
16	2590C	1	Switch Assembly (Push Button)	45	70274	1	Shield, Wire
17	3559T	1	Body Container Assembly (Includes Code 20)	46	70360A	1	Switch, Start-Reverse
18	1383A	1	Cover, Trim	47	2267CT	1	Protector, Overload
19	1225N	1	Body, Lower	48	70424A	1	Lower End Frame Assy (Includes Code 50)
20	4395	1	Gasket, Shredder	49	2486A	2	Bolt, Thru
21	70814	1	Adapter Assy, Shredder	50	70999	1	Screw, Ground
22	1398AE	1	Trim Shell Assembly	51	71387	1	Cover, Terminal
23	5097	1	Clip, Trim Shell	52	70275	1	Screw, Terminal Cover
24	70647	1	Sleeve & Seal Kit (Includes Codes 25 - 29)	53	70667	1	Bushing
25	2854	1	Plug	54	72175	1	Cord / Sleeve Assy
26	N/A	1	Bolt, Hex Head Flange	55	72190	1	Install, Care & Use Book (Not Shown)
27	N/A	1	Slinger	56	4577	1	Wrenchette (Not Shown)
28	N/A	1	Seal	57	72179	1	Service List (Not Shown)
29	N/A	1	Sleeve	---	2610TL	1	Instruction Assy (Not Shown) (Incl. Codes 5, 35-40, 55-57)